





Fire Extinguisher Bracket for INEOS Grenadier by Agile Offroad

AO-E6G-X



INSTALLATION GUIDE



Fire Extinguisher Bracket for INEOS Grenadier by Agile Offroad

The Agile Offroad Fire Extinguisher Bracket mounts securely under the driver's seat of the INEOS Grenadier, offering a rugged, rattlefree design with an optional quick-release mount for instant fire extinguisher access when you need it most.

Fire safety is essential for any off-road adventure, and the Agile Offroad Fire Extinguisher Bracket ensures that your extinguisher is securely mounted and instantly accessible in your INEOS Grenadier.

Built from 11-gauge HRP & O powder-coated steel, this heavy-duty mount installs underneath the driver's seat, keeping your fire extinguisher secure, out of the way, yet easy to reach in case of an emergency. For those who want even faster deployment, the bracket is compatible with the Range Industries Quick Release Mount, a CNC-machined billet aluminum holder that allows for one-handed operation with a rattle-free hold.

SKU

AO-E6G-O3 (Bracket kit only)

AO-E6G-O4 (Bracket Kit w/Quick Release Mount)

000-107-355 (Extinguisher Quick Release Mount)

PARTS INCLUDED

- 1 x AO Lower Seat Support Bracket
- 1 x AO Extinguisher Mount L-Bracket
- 2 x M8 Flanged Bolt
- 2 x M8 Flange Nut

TOOL NEEDED

- 12mm Wrench/Socket
- 13mm Wrench/Socket

INSTALLATION TIME

30 Minutes







INSTALLATION GUIDE



I. Unjust the driver side seat back.



Z. Use a 13mm wrench/socket to remove the two upper seat support bracket bolts.



3. Use a 13mm wrench/socket to remove the four rear seat support bracket bolts.



4. Remove bracket.



5. Install the AO lower seat support bracket using the factory bolts. Do not fully tighten.



6. Install the factory bolts to the upper support bracket holes. Starting from the rear bolts, fully tighten all six bolts. Torque to 18 ft lbs.





INSTALLATION GUIDE



7. Install the two supplied M8 flange bolts through the center AO support bracket holes.



3. Install the I-bracket mount the AO support bracket using the two supplied flange nuts. Torque to 18 ft lbs.



7. Mount the Quick Release Extinguisher Mount using the supplied M6 button head bolts and M6 flange nuts. Torque to 6 ft lbs.



ID. The Quick Release Extinguisher Mount is designed to be used with a 2.5 lb fire extinguisher (not included) with a 2.5 inch diameter. Use the supplied clamps to attach the fire extinguisher to the quick release cradle.

4











Water &

Fuel Tanks











Exterior

Suspension Air Locker & Drivetrain

Steering & Brakes Com

Air Armor & Compressors Protection

Bumpers n



Lighting





Tires



Storage & Racks



Winches &

Recovery



Replacement Parts &

Accessories

Electrical

 $\Box \Box \Box$



Tools





