



HORN UPGRADE KIT VS30 SPRINTER (2019+)

GENERAL INFORMATION

The AO Horn Upgrade Kit is designed to be installed on the VS30 Sprinter (2019+). The upgrade kit includes a bolt-on bracket for the horns & pre-assembled wiring.


PARTS INCLUDED

- | | |
|----------------------------------|-------------------|
| (2) Bass horns | (4) Flat Washers |
| (1) Bolt-on horn bracket | (2) Bolts |
| (1) Pre-assembled wiring harness | (2) Threaded nuts |

TOOLS NEEDED

- T-25 Screw Driver
- 1/2 in. Socket and Wrench
- 13 mm Socket and Wrench


1. Remove 3 T-25 Torx screws at the top of the grill and pull firmly along the lower portion of the grill to remove it.

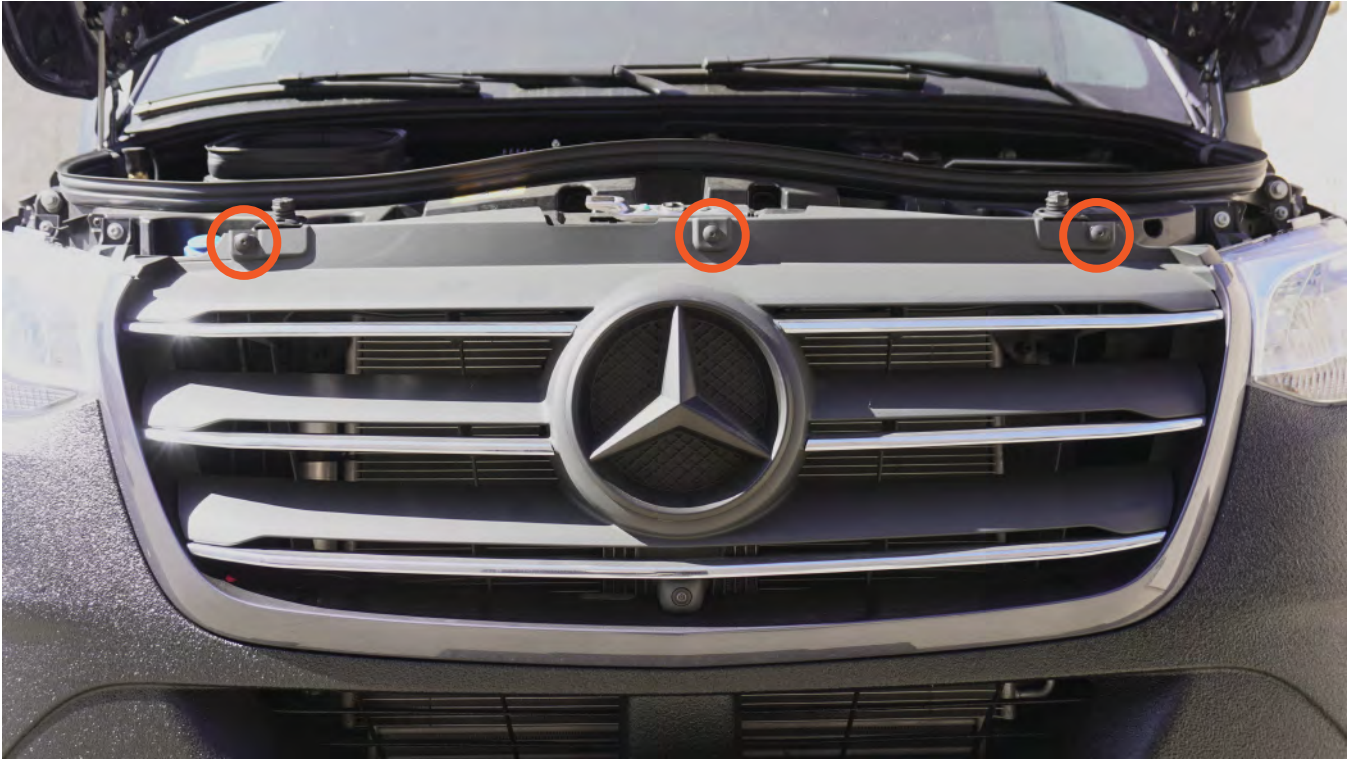

2. Unplug the front camera. Push in on the clip and gently pull the cable from the back of the camera.



3. Remove the 2 T-25 Torx screws holding the “t-shaped” cruise control distance sensor brackets.

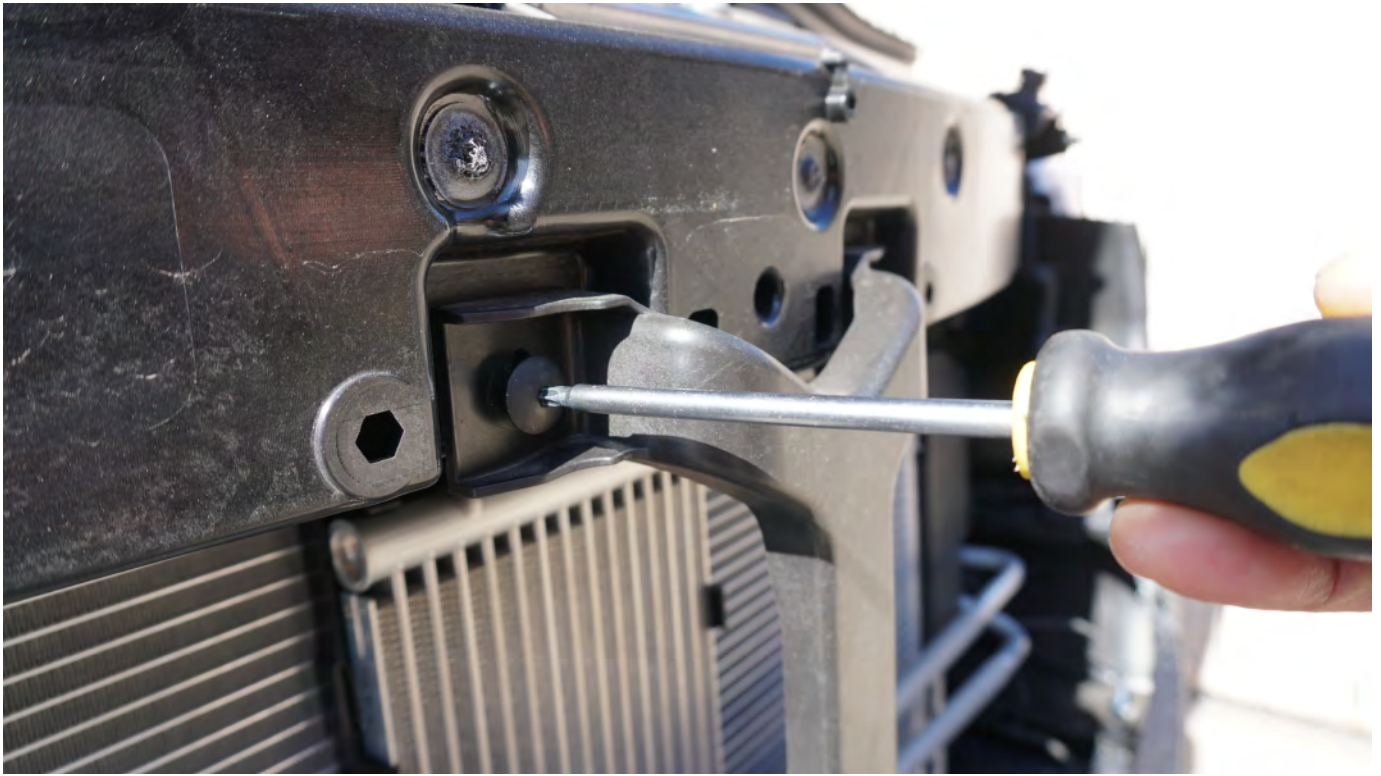


4. Unbolt the factory horn using a 13mm socket. Then, using a screwdriver, slide the white tab away from the horn. Next, depress the tab to disconnect the horn from the factory harness.



5. Mount the horns to the bracket using included hardware and attach the pre-assembled wiring harness to the horns.



6. Mount horn bracket behind cruise control distance sensor bracket and re-assemble with previously removed T-25 Torx screws.

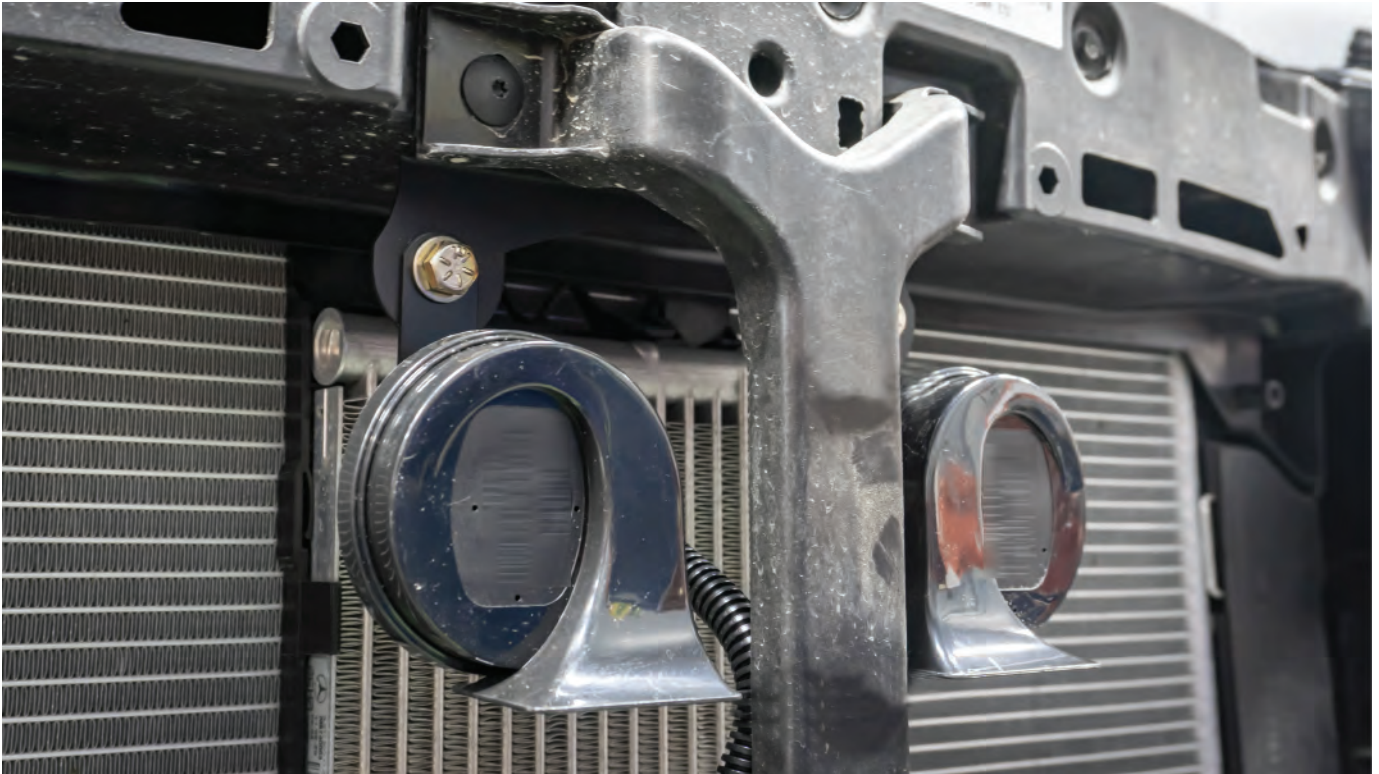

7. Plug the AO Horn Upgrade Harness into the factory horn wiring.



8. Secure the remaining horn wiring to the cruise sensor bracket using zip-ties, as shown.



9. Re-install the front grill. Congratulations! Your installation is now complete!

