



## MB Sprinter black 3 pointed star installation


---

**Required tools:** T25 torx screw driver, small flat blade screw driver, stubby flat blade screw driver.

**A) Open hood**

**B) Remove the 2 T25 torx head screws from the front grill.**

**C) With the small flat blade screw driver, pry the 4 remaining grill retaining clips open and out.**

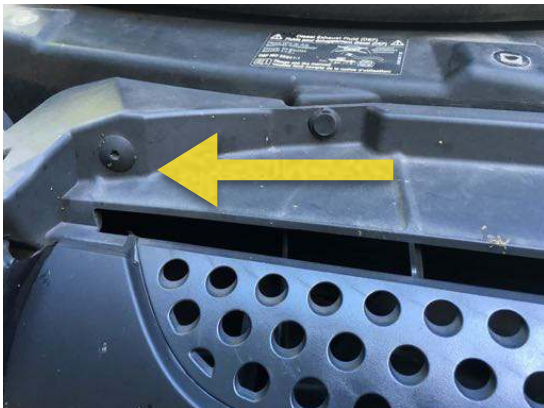

**Removing the chrome 3 pointed star:**

**A) With all the grill attachment hardware out, pry the grill forward enough to get access to the backside of the emblem.**

**B) Use the stubby flat blade to gently but forcibly break the tabs. Do so by pushing the tab with the screw driver towards the inside of the emblem. There are 6 tabs, one in the center, and 5 surrounding the outer rim.**

**C) With all the tabs broken, chrome star will easily exit the grill.**

**D) Orientate the new Black emblem and snap into place.**



## Replacing the Grill hardware

- A) install the 4 push pin clips, and the 2 T25 torx screws.
- B) You're done High five yourself!

Thanks for buying our products!

More great Sprinter products at: [Terrawagen.com](http://Terrawagen.com)