




2008-18 Sprinter Horn Kit Installation Guide



Loosen 2 T-25 Torx bolts at the top corners of the front grill.



Use a plastic pin removal tool to remove the remaining push pins along the top edge.

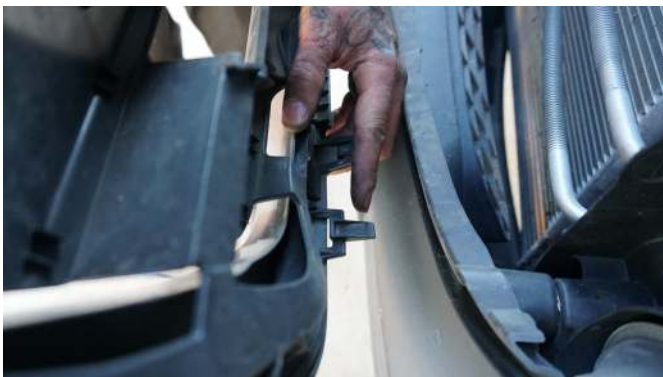

Depress tabs along the lower edge of the grill and pull firmly to remove it.



Drill 2 3/8" holes into the upper radiator shroud. Center the holes in the front openings as shown.



Mount horns to bracket using included hardware and attach the pre-assembled wiring harness to horns. Assemble as shown.



Cut factory horn wiring as close to the connector as possible and remove factory horn.



Crimp new wiring harness to factory horn wiring using included butt connectors. Attach red wire to green & black wire to brown. Once connected, apply heat from a heat gun or small torch to the connectors to activate the shrink wrap to ensure a weather-resistant seal.



Drill several 1/4" holes along the edges of the shroud and a single 1/2" hole in the upper left corner. Route wiring and secure with zip-ties as shown.



Drill several 1/4" holes along the edges of the shroud and a single 1/2" hole in the upper left corner. Route wiring and secure with zip-ties as shown.



Re-install the front grill. Congratulations! Your installation is now complete!