

AGILE OFFROAD

Sprinter 3500 Front Wheel Spacer Installation Guide



Package Includes:

- (2) AO wheel spacers
- (12) Front hub bolts
- Red thread-locker




Lift your vehicle, support it with jack stands, and remove the front wheels.



Remove the 6 factory bolts holding the hub spacer to the brake rotor.



New hub spacer bolts are supplied with the kit.

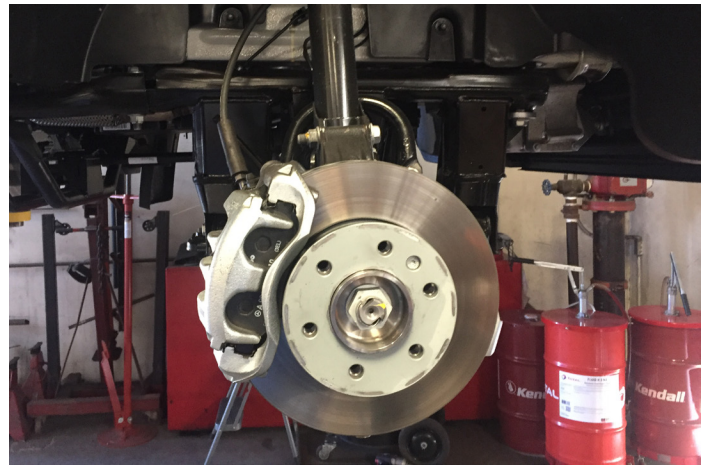


Remove hub spacer and clean rotor flange of rust and debris.



Apply a small amount of anti-seize to where the wheel spacer sits on the rotor flange. Install Agile Spacer.



Apply a small amount of red loctite to supplied bolts.

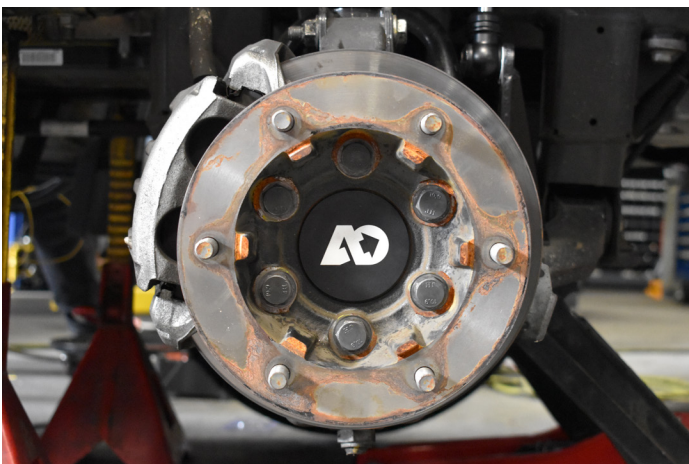

Re-install the factory hub spacer.



Re-install wheels. Lower vehicle on the ground. Torque hub spacer bolts 140 ft-lbs. Then torque lug nuts to 120 ft-lbs.