



**AGILE
OFFROAD**
SMARTER THAN DIRT



INSTALLATION GUIDE

INEOS Grenadier Front Diff Skid Plate
by Agile Offroad


AOR-P3G-3 (Front - Black)

AOR-P3G-3OR (Front - Orange)

INSTALLATION GUIDE

SHIELD YOUR INEOS GRENADIER: A DIFFERENTIAL SKID PLATE IS THE ULTIMATE OFF-ROAD ESSENTIAL

INEOS Grenadier Front Diff Skid Plate by Agile Offroad

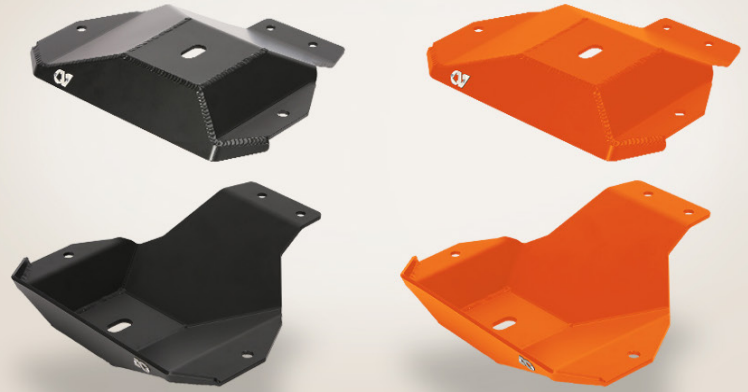

Are you an off-roading enthusiast? Do you seek to conquer the toughest terrains with your Grenadier? If so, then protecting it is a top priority. Introducing the ultimate off-road Grenadier accessory – the differential skid plate by Agile Offroad. Designed to prevent you from getting hung up on obstacles while safeguarding your Grenadier’s vulnerable undercarriage components, this heavy-duty skid plate acts as a shield against rocks, debris, and other hazards you may encounter on your adventures. With its rugged construction and direct fit design, the INEOS Grenadier differential skid plate ensures that your vehicle’s differential, one of the most critical components, remains safe from damage. This not only prolongs the lifespan of your vehicle but also saves you from expensive repairs. Whether you’re an experienced off-roader or a novice seeking to explore new horizons, investing in a INEOS Grenadier differential skid plate by Agile Offroad is a wise choice.

SKU

AOR-P3G-3XX

PARTS INCLUDED

- 1 x AO Front Diff Skid Plate
- 2 x M10-1.5x20mm ARP Stainless Flange Bolt
- 2 x M12-1.5 x 25mm Hex Stainless
- 1 x Blue Threadlocker Capsule


TOOL NEEDED

- Panel Clip Removal Tool
- 12mm Socket/Wrench
- 14mm Socket/Wrench
- Torque Wrench

INSTALLATION TIME

30 min


INSTALLATION GUIDE

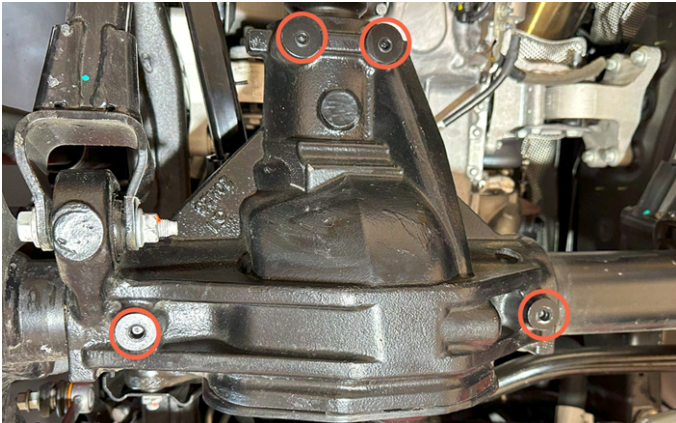


1. The front differential comes from the factory with 4 threaded bosses




2. Remove the thread caps using a panel clip removal tool or a pick.

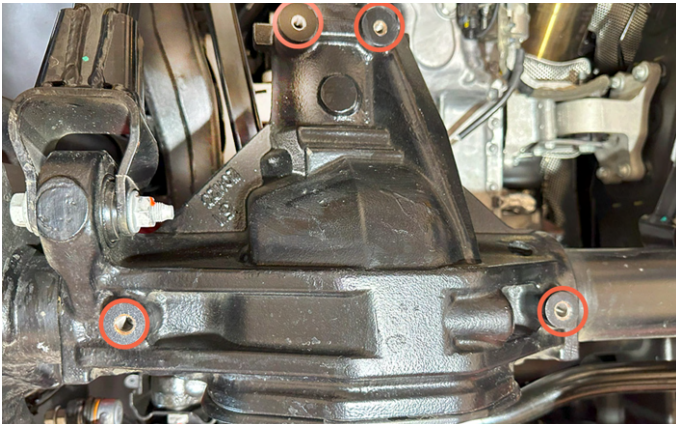

3. Inspect the 4 threaded bosses. Clean threads if necessary. *Note: A thread tap may be required if the threads are damaged.

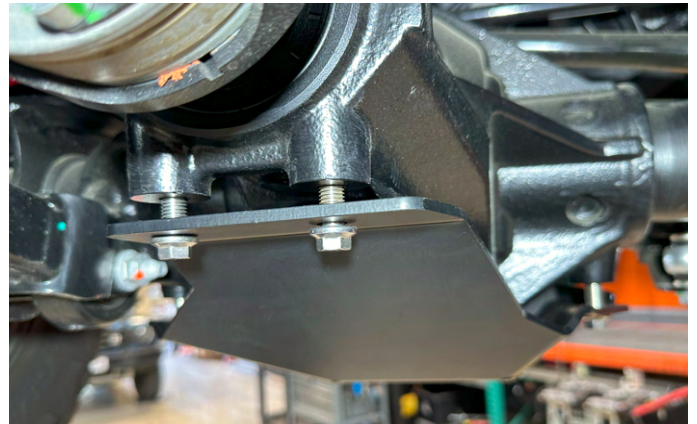

4. Install the AO Diff Skid Plate using the supplied (2) M10-1.5x20mm and (2) M12-1.5x25mm bolts. Start by adding a small drop of the supplied blue threadlocker to each bolt then install each bolt 2-3 turns only.

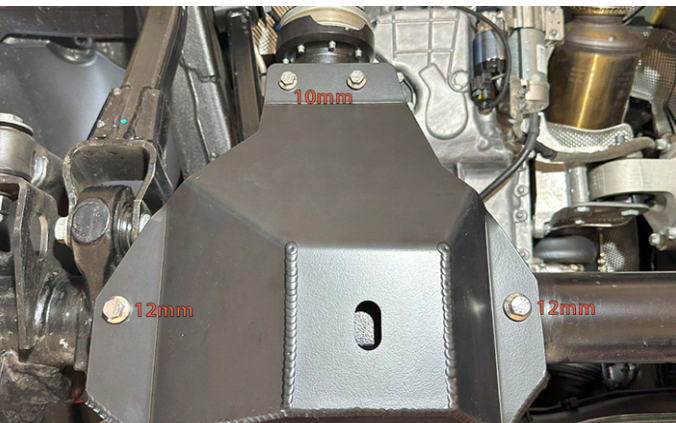

5. With all 4 bolts installed, evenly tighten each bolt until the AO Skid Plate has contacted all 4 bosses.



6. Fully tighten all 4 bolts. Torque the (2) M10 bolts to 40 ft/lbs and the (2) M12 bolts to 53 ft/lbs.

INEOS
GRENADIER



AGILE
OFFROAD



Interior



Exterior



Suspension



Air Locker &
Drivetrain



Steering &
Brakes



Air
Compressors



Armor &
Protection



Bumpers



Lighting



Wheels &
Tires



Storage &
Racks



Water &
Fuel Tanks



Winches &
Recovery



Replacement
Parts &
Accessories



Electrical



Tools



agileoffroad.com



info@agileoffroad.com



619-328-1297