


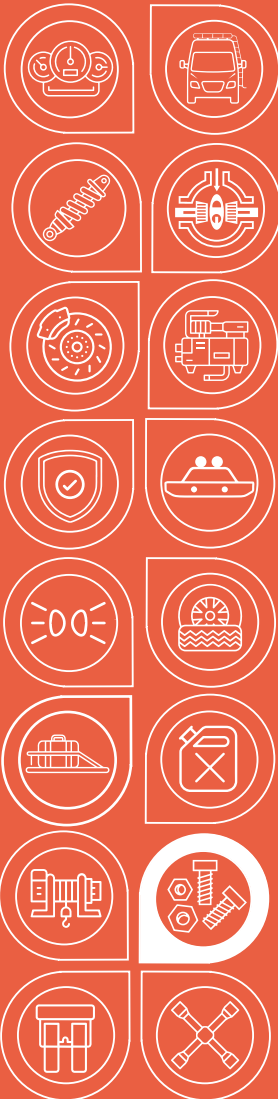

**AGILE
OFFROAD**
SMARTER THAN DIRT



Installation Guide

HOOD EZ GRAB TAB FOR SPRINTER
BY AGILE OFFROAD

SKU AO-E3S-1

EASY HOOD ACCESS FOR OFF-ROAD ADVENTURES

HOOD EZ GRAB TAB FOR SPRINTER BY AGILE OFFROAD



Can only be used with vans equipped with hood struts.

SKU

AO-E3S-1

PARTS INCLUDED

1 x AO Strap

1 x Conical Washer

1 x Flat Head Bolt

1 x Rivet Nut w/Installation Tool

TOOL NEEDED

$\frac{9}{16}$ " Open Wrench

3mm Allen Wrench

4mm Allen Wrench

INSTALLATION TIME

20-30 minutes

INSTALLATION GUIDE



1. Fully open the hood and locate the factory hole to the right of the hood latch.



2. Insert the supplied Rivet nut and installation tool assembly into the factory hole. Use a 9/16" wrench to hold the installation nut and a 4mm Allen wrench to tighten the center bolt. Tightening the center bolt causes the Rivet nut to crimp on the hood sheet metal.



3. Tighten center bolt approx. 3.5 turns until the Rivet nut is fully collapsed. DO NOT OVER-TIGHTEN.



4. Ensure the Rivet nut is fully collapsed.



5. Use a 3mm Allen wrench to install the AO Hood Strap using the supplied flat head bolt and conical washer.



6. Align the AO Hood Strap as shown. Torque bolt to 16 inch-lbs.

 **AGILE
OFFROAD**
SMARTER THAN DIRT



Interior



Exterior



Suspension



Air Locker &
Drivetrain



Steering &
Brakes



Air
Compressors



Armor &
Protection



Bumpers



Lighting



Wheels &
Tires



Storage &
Racks



Water &
Fuel Tanks



Winches &
Recovery



Replacement
Parts &
Accessories



Electrical



Tools

