


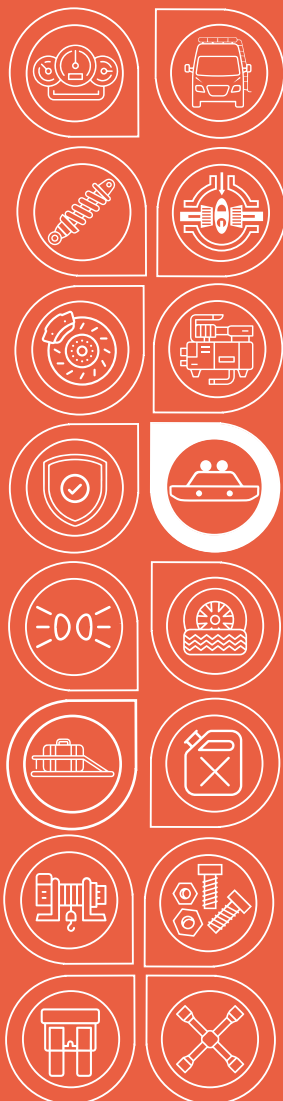

**AGILE
OFFROAD**
SMARTER THAN DIRT



Installation Guide

STEPANY REAR STEP FOR
SPRINTER BY AGILE OFFROAD

AO-B3S-7

INSTALLATION GUIDE

DURABLE, NON-SLIP ACCESS TO YOUR VAN

STEPANY REAR STEP FOR SPRINTER
BY AGILE OFFROAD



Make entering and exiting your Sprinter van safer and easier with the StepAny Rear Step by Agile Offroad. Designed for strength and durability, this heavy-duty step is constructed from 3/16" HRP&O steel, ensuring maximum load capacity and impact resistance.

The black powder-coated finish offers corrosion protection, while the integrated grip surface provides enhanced traction, even in wet or muddy conditions. Installation is quick and effortless, securing directly to the factory rear hitch with no drilling or modifications required.

Whether you're an overlander, tradesperson, or fleet operator, the StepAny Rear Step adds reliable functionality to your Sprinter, making cargo access more convenient and safer in any environment.

SKU

AO-B3S-7

PARTS INCLUDED

1 x StepAny Rear Step

2 x M12 Zinc Hex Bolt

2 x M12 Zinc Nyloc Nut

4 x M12 Washer

1 x M8 Zinc Flange Bolt

1 x M8 Flange Nut

TOOL NEEDED

13mm Socket/Wrench

19mm Socket/Wrench

INSTALLATION TIME

30 Minutes

INSTALLATION GUIDE



1. The AO StepAny Rear Step is designed to work on the passenger side of the factory Mercedes hitch.



2. Locate the oval hole at the top center plate of the hitch as shown.



3. Locate the two holes on the passenger side plate of the hitch.



4. Install the AO StepAny step using the supplied M8 and M12 Hardware. Torque the M8 hardware to 18 ft lbs. Torque the M12 hardware to 65 ft lbs.





Interior



Exterior



Suspension



Air Locker &
Drivetrain



Steering &
Brakes



Air
Compressors



Armor &
Protection



Bumpers



Lighting



Wheels &
Tires



Storage &
Racks



Water &
Fuel Tanks



Winches &
Recovery



Replacement
Parts &
Accessories



Electrical



Tools



agileoffroad.com



info@agileoffroad.com



619-328-1297