


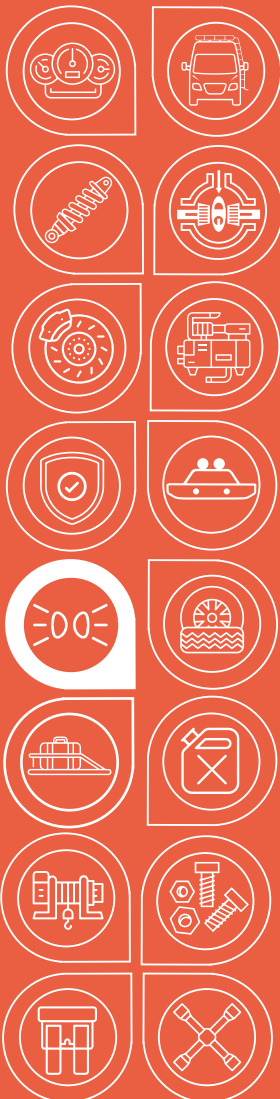

**AGILE
OFFROAD**
SMARTER THAN DIRT



Installation Guide

COWL LIGHT BRACKET KIT FOR
SPRINTER 2019+ BY AGILE OFFROAD

AOR00202

INSTALLATION GUIDE

LOW-PROFILE COWL-MOUNTED LIGHT KIT

COWL LIGHT BRACKET KIT FOR SPRINTER
BY AGILE OFFROAD



The Agile Offroad Cowl Light Bracket Kit for 2019+ Mercedes-Benz Sprinter is designed to give your van reliable trail and auxiliary lighting with minimal install effort. The steel brackets are finished in black powder coat and mount cleanly to the cowl area with no cutting or drilling.

Optional plug-and-play wiring harnesses and Squadron Pro Driving/Combo LED light pods from Baja Designs, this kit delivers excellent light projection with rugged, weatherproof reliability. Choose between amber or white lens options to suit your visibility needs on or off the trail.

SKU

AOR00202

PARTS INCLUDED

1 x AO Driver Side Cowl Bracket

1 x AO Passenger Side Cowl Bracket

4 x M8 Flange Nut

6 x Wire Ties

TOOL NEEDED

13mm Wrench/Socket

Flush Cut Pliers

INSTALLATION TIME

30-45 Minutes

INSTALLATION GUIDE



1. The brackets are side specific. Identify the driver's side cowl bracket.



2. Open the hood. Locate the two studs protruding from the driver's side hood hinge.



3. Install the hood bracket onto the two studs using two of the supplied M8 flange nuts. Torque nuts to 18 ft lbs.



4. Top View of the cowl bracket.



5. Attach the light of your choice. Use the supplied wire ties to attach the light cable to the bracket slots. Repeat steps 3-5 on the passenger side.



Interior



Exterior



Suspension



Air Locker &
Drivetrain



Steering &
Brakes



Air
Compressors



Armor &
Protection



Bumpers



Lighting



Wheels &
Tires



Storage &
Racks



Water &
Fuel Tanks



Winches &
Recovery



Replacement
Parts &
Accessories



Electrical



Tools

