


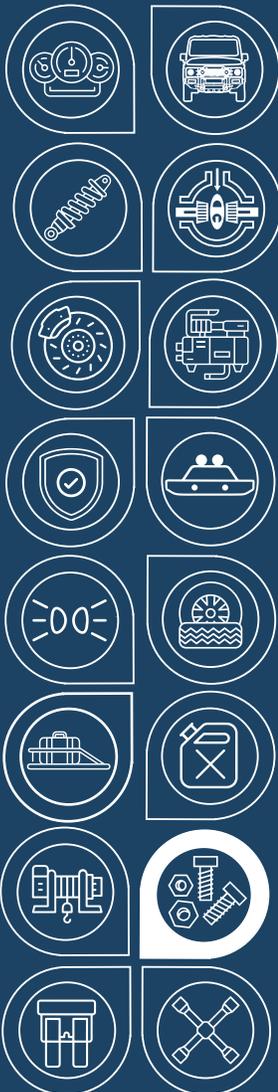

**AGILE
OFFROAD**
SMARTER THAN DIRT



INSTALLATION GUIDE


Behind Dash Accessory Mount Plate Kit for
INEOS Grenadier by Agile Offroad

G18-1002

INSTALLATION GUIDE

UNIVERSAL BEHIND-DASH MOUNTING SOLUTION

Behind Dash Accessory Mount Plate Kit for
INEOS Grenadier by Agile Offroad

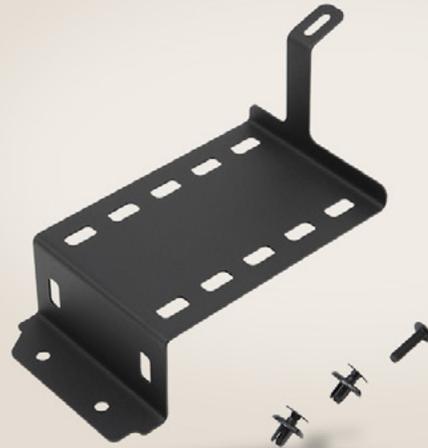

This powder-coated 16GA steel mount provides a secure, hidden location for installing accessory modules behind the dash of your INEOS Grenadier. Designed with universal mounting points, it fits below and to the left of the steering wheel, perfect for cleanly mounting radio computers or control modules out of sight.

SKU

G18-1002

PARTS INCLUDED

1 x Dash Plate

2 x 8mm Plastic Panel Clips

1 x 6mm Screw

TOOL NEEDED

T20 Torx Bit

T30 Torx Bit

Metric Socket Set

Drill Motor

5/16" Drill Bit

Paint Pen


INSTALLATION TIME

30-45 Minutes

INSTALLATION GUIDE



1. Remove the lower corner dash panel. Start by pulling out from the bottom of the panel.

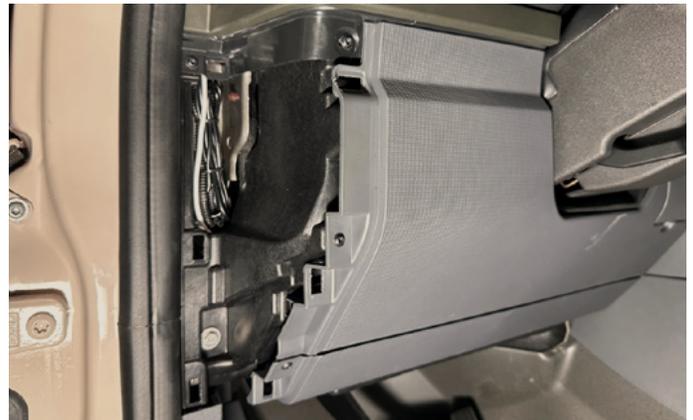

2. Completely remove panel.




3. Use a T20 Torx bit to remove the two lower panel screws.



4. Remove lower panel. Use a T20 Torx bit to remove the three mid-panel screws.




5. Use a T20 Torx bit to remove the single mid-panel screw located on the left side of panel.

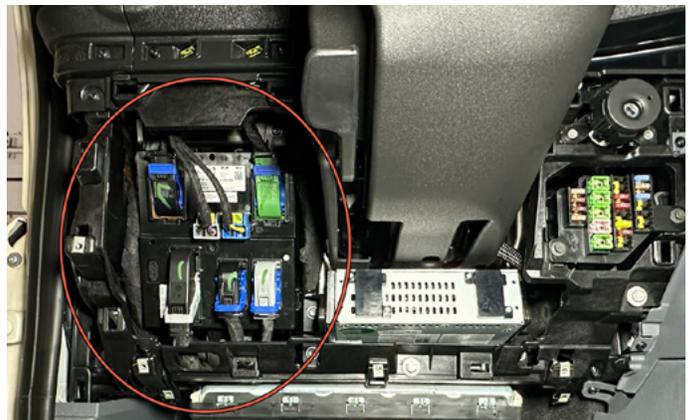


6. Remove the mid-panel. The AO Dash Plate is designed to be installed over the factory control module located at the lower left side of the steering wheel.

INSTALLATION GUIDE

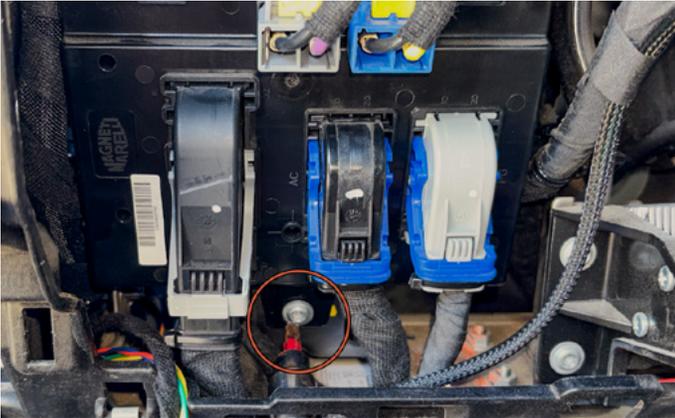


7. Use a T30 Torx bit to remove the single screw located at the bottom of the control module.

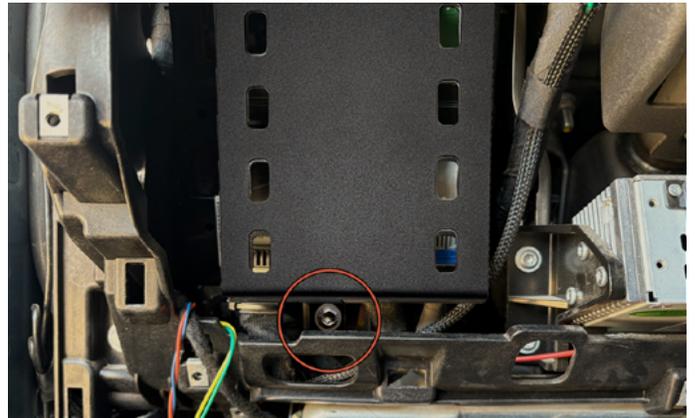

8. Install the AO Dash Plate over the control module using the supplied 6mm screw at the bottom of plate. Hand tighten screw only.



9. Position the top of the bracket centered between the two dash panel mounting clip holes. Use a paint pen, mark the two holes at the top of the plate.

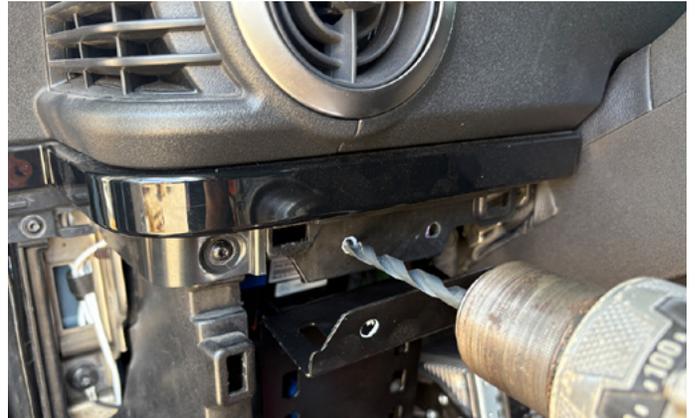

10. Use a $\frac{5}{16}$ " drill bit to drill the marked holes. **Note: Only drill through the initial front plastic panel.**



11. Secure the AO Dash Plate at the top using the two supplied plastic panel clips. Insert clips through plate and into the drilled holes. Push in lock tab. Use a T30 Torx bit to completely tighten the lower screw. Accessories can be attached to the AO Dash Plate using Velcro tape, cable ties or a combination of both.



12. Follow steps 1-6 to re-install the lower dash panels.



INEOS
GRENA DIER



AGILE
OFFROAD



Interior



Exterior



Suspension



Air Locker &
Drivetrain



Steering &
Brakes



Air
Compressors



Armor &
Protection



Bumpers



Lighting



Wheels &
Tires



Storage &
Racks



Water &
Fuel Tanks



Winches &
Recovery



Replacement
Parts &
Accessories



Electrical



Tools



agileoffroad.com



info@agileoffroad.com



619-328-1297