


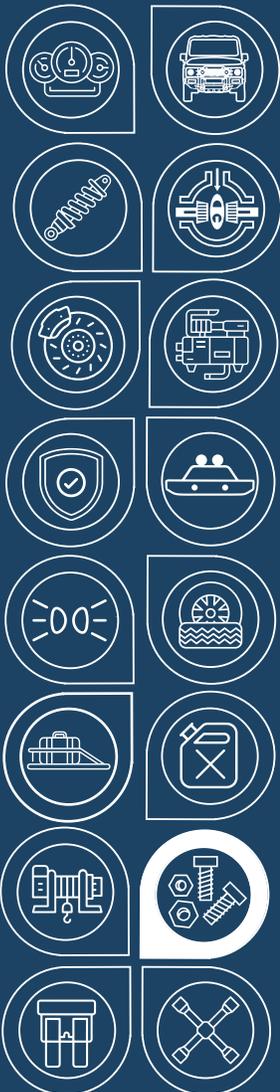

**AGILE
OFFROAD**
SMARTER THAN DIRT



INSTALLATION GUIDE

Wolfbox Mounting Kit for INEOS Grenadier
by Agile Offroad

G18-1005

INSTALLATION GUIDE

SECURE

WOLFBOX MIRROR MOUNT UPGRADE

Wolfbox Mounting Kit for INEOS Grenadier
by Agile Offroad

BACK SIDE



WOLFBOX SIDE



A billet aluminum mounting solution designed to securely mount the Wolfbox rearview mirror to the factory mirror mounting point on the INEOS Grenadier. Built to eliminate movement caused by the heavier Wolfbox mirror during off-road use.

SKU

G18-1005

PARTS INCLUDED

1 x AO Wolfbox Mirror Mounting Bracket
(Wolfbox Mirror Sold Separately)

1 x Ball Mount Wrench

TOOL NEEDED

#1 Phillips Screwdriver

Clip Remove Tool

INSTALLATION TIME

20 Minutes

INSTALLATION GUIDE



1. Remove the four rubber pads on back of Wolfbox mirror.



2. Use a #1 Phillips screwdriver to remove the four mirror tab screws.



3. Remove the four tabs.



4. Install the AO Mirror Bracket adapter as shown using the previously removed screws.



5. Remove the ball mount nut.

INSTALLATION GUIDE



6 A/B. Use a clip removal tool to remove the outer c-clip from the factory installed mirror. The factory mirror has a small slot on the upper driver side to aid in the removal of c-clip.



7. With c-clip removed, pull straight back on mirror.



8. Install AO Mirror Bracket Adapter ball mount nut.




9. Install the mirror assembly onto the factory ball mount.



10. Screw on the ball nut.

INSTALLATION GUIDE

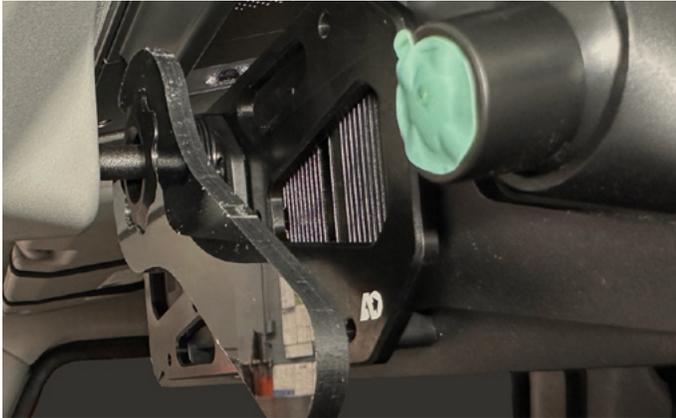

11. Use the supplied wrench to fully tighten ball nut.



12. Adjust mirror as desired. Use the Wolfbox supplied instructions for wiring instructions.

INEOS
GRENADIER



AGILE
OFFROAD



Interior



Exterior



Suspension



Air Locker &
Drivetrain



Steering &
Brakes



Air
Compressors



Armor &
Protection



Bumpers



Lighting



Wheels &
Tires



Storage &
Racks



Water &
Fuel Tanks



Winches &
Recovery



Replacement
Parts &
Accessories



Electrical



Tools



agileoffroad.com



info@agileoffroad.com



619-328-1297