



**AGILE
OFFROAD**
SMARTER THAN DIRT



INSTALLATION GUIDE

LUXLOCK Lighted Ignition Keyhole Upgrade
for INEOS Grenadier by Agile Offroad

G18-1006

LIGHTED IGNITION KEYHOLE UPGRADE

LUXLOCK™ Lighted Ignition Keyhole Upgrade
for INEOS Grenadier by Agile Offroad



The LUXLOCK™ Lighted Ignition Keyhole Upgrade adds a clean, factory-style illumination to the Grenadier's ignition switch, making it easy to locate the keyhole in low-light conditions.

SKU

G18-1006

PARTS INCLUDED

1 x AO LuxLock Ignition Keyhole Upgrade

TOOL NEEDED


T20 Torx Bit

T30 Torx Bit


INSTALLATION TIME

20 Minutes



INSTALLATION GUIDE

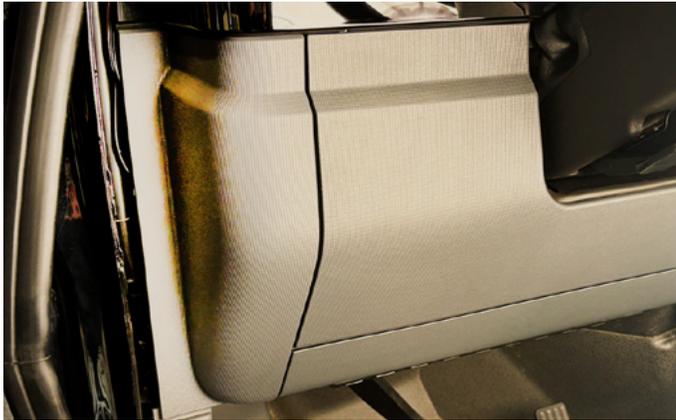

1. Partially remove the driver side weatherstrip closest to the steering wheel.

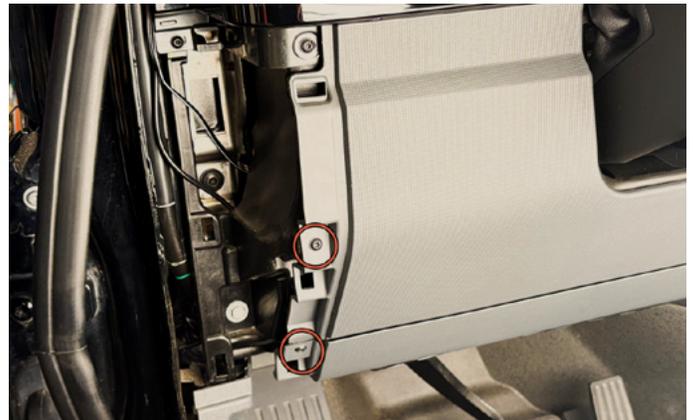

2. Remove the corner dash panel. Use a T20 Torx bit to remove the two left side center dash panel screws.

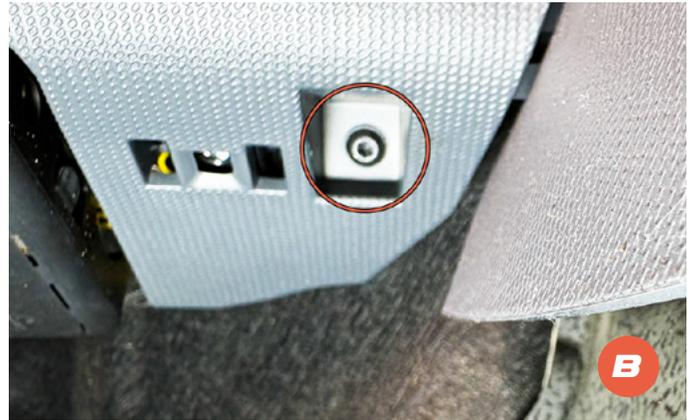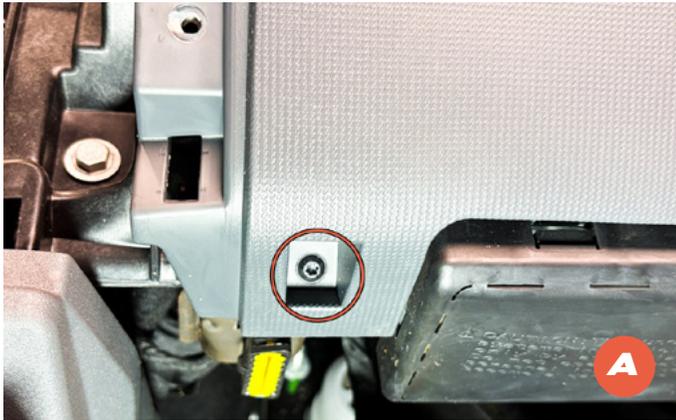


3 A/B. Use a T20 Torx bit to remove the two lower panel screws. Remove the lower panel.





4. Use a T20 Torx bit to remove the three lower screws of the center panel. Remove center panel.



INSTALLATION GUIDE

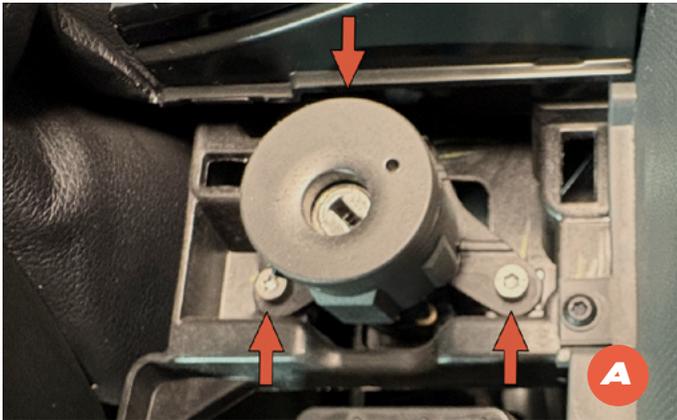

5 A/B. Use a T25 Torx bit to remove the three ignition screws.

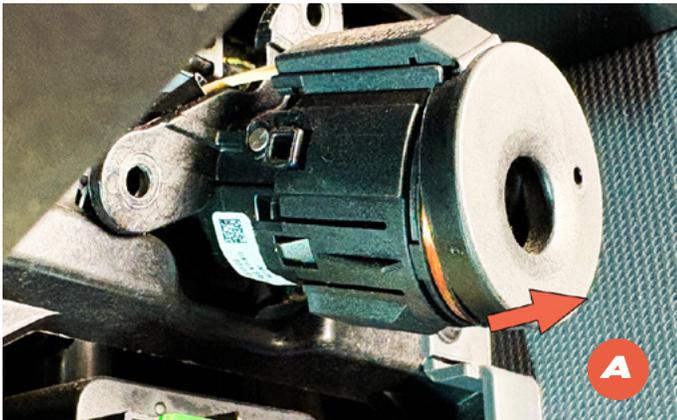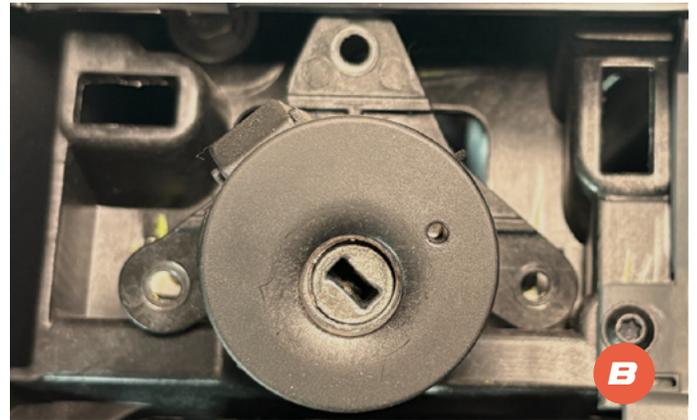

6 A/B. Gently pull from the bottom of the ignition ring and remove completely.

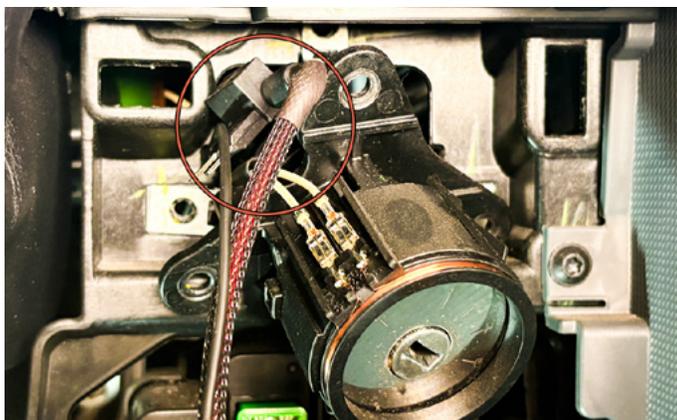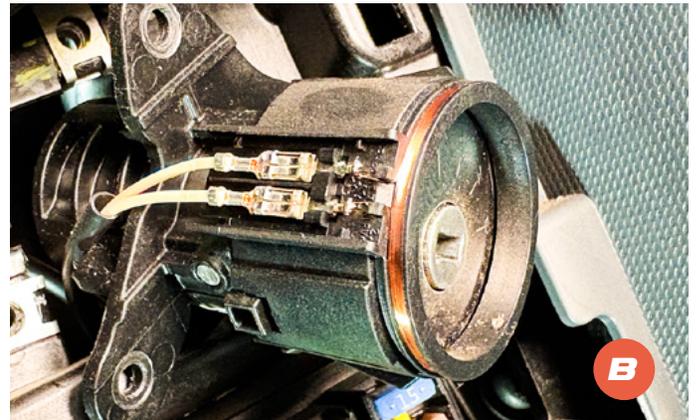


7. Route the AO LuxLock Ignition Keyhole harness in the hole behind the ignition.




8. Continue routing the harness to the fuse block below ignition.


INSTALLATION GUIDE

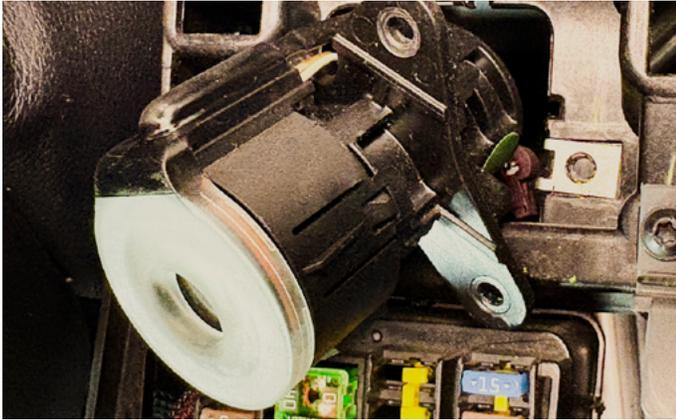


9. Install the AO LuxLock Ignition Keyhole onto the ignition assembly.

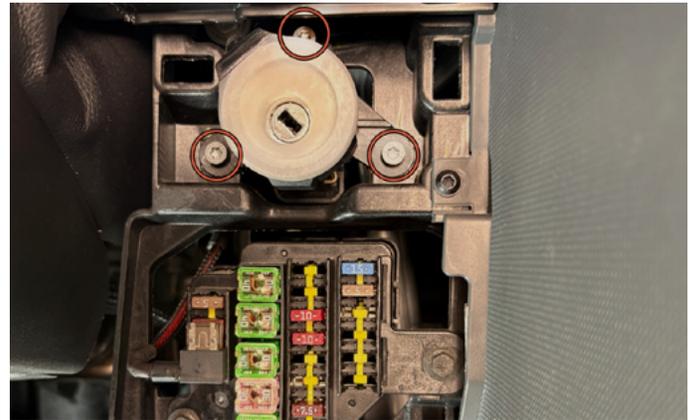

10. Re-install the ignition assembly using the factory screws.

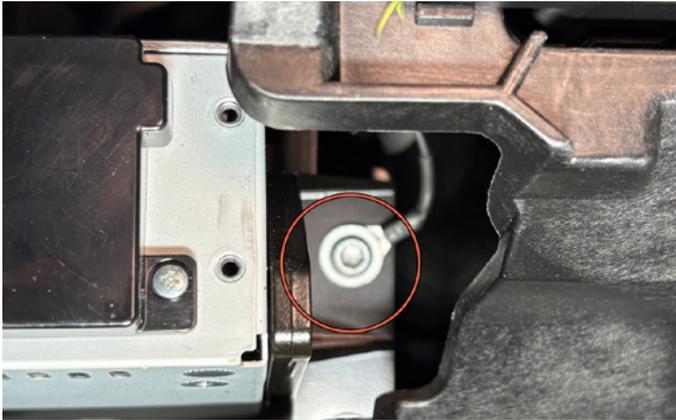

11. Use a T30 Torx bit to install the harness ground ring to the screw located behind the bottom corner of the fuse block.

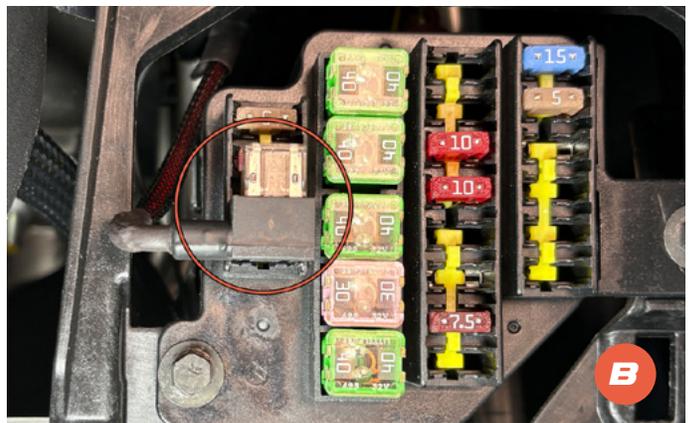

12 A/B. Remove the lower driver side 5-amp fuse and install the harness piggyback fuse holder. Install the removed fuse into the empty slot of the piggyback fuse holder.



13. Use steps 1-4 to replace the center, lower, and side panels. Re-install the partially removed door weatherstripping.



INEOS
GRENA DIER



AGILE
OFFROAD



Interior



Exterior



Suspension



Air Locker &
Drivetrain



Steering &
Brakes



Air
Compressors



Armor &
Protection



Bumpers



Lighting



Wheels &
Tires



Storage &
Racks



Water &
Fuel Tanks



Winches &
Recovery



Replacement
Parts &
Accessories



Electrical



Tools



agileoffroad.com



info@agileoffroad.com



619-328-1297