


INSTALLATION GUIDE

Attaching motor to linkage assembly

The motors must be attached to the linkage assemblies before continuing the installation process.

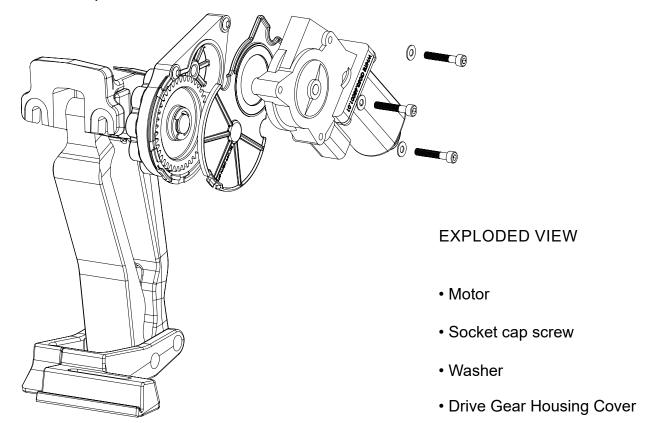

CAUTION: HANDLE WITH CARE.

To ensure our customers receive all components with full integrity, we pack the motors separate from their linkage assemblies. This requires that the installer position and fasten the motor before continuing with the install. Please follow the instructions below and handle the assembly carefully.


CAUTION: Dropping the assembly or any excessive impact MAY cause damage to the motor.


Instructions:


1. Position the gear cover in place as shown if not already in place.

2. Seat motor into position on the three mounting bosses. This may require an adjustment of the gear by moving the swing arms.


3. After seating into place, fasten the motor with the three motor mount screws with 4mm Hex Head. Tighten screws to 36 in-lbs (4N-m). **Do not over torque.**

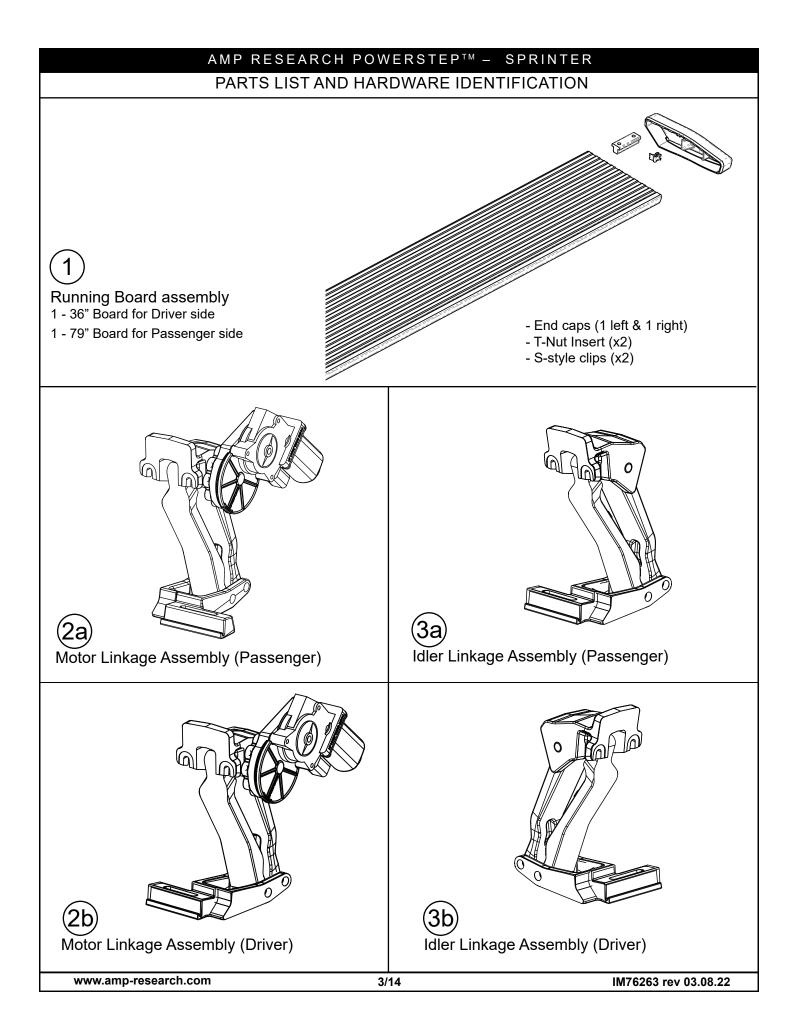

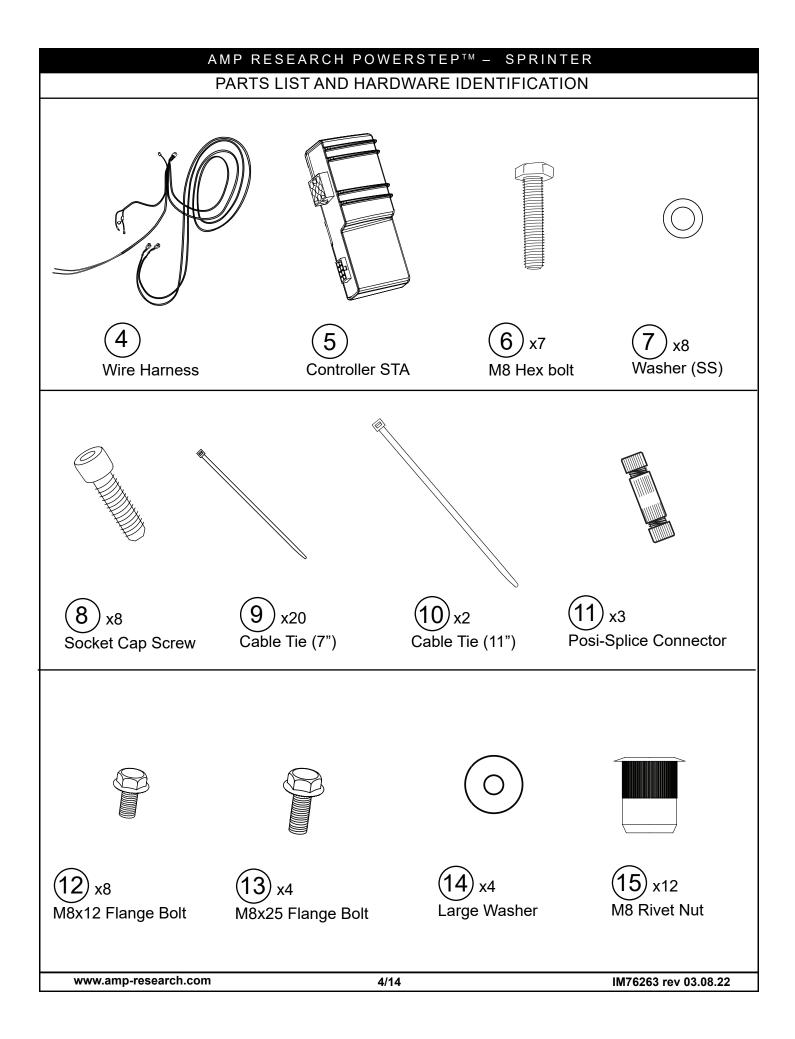


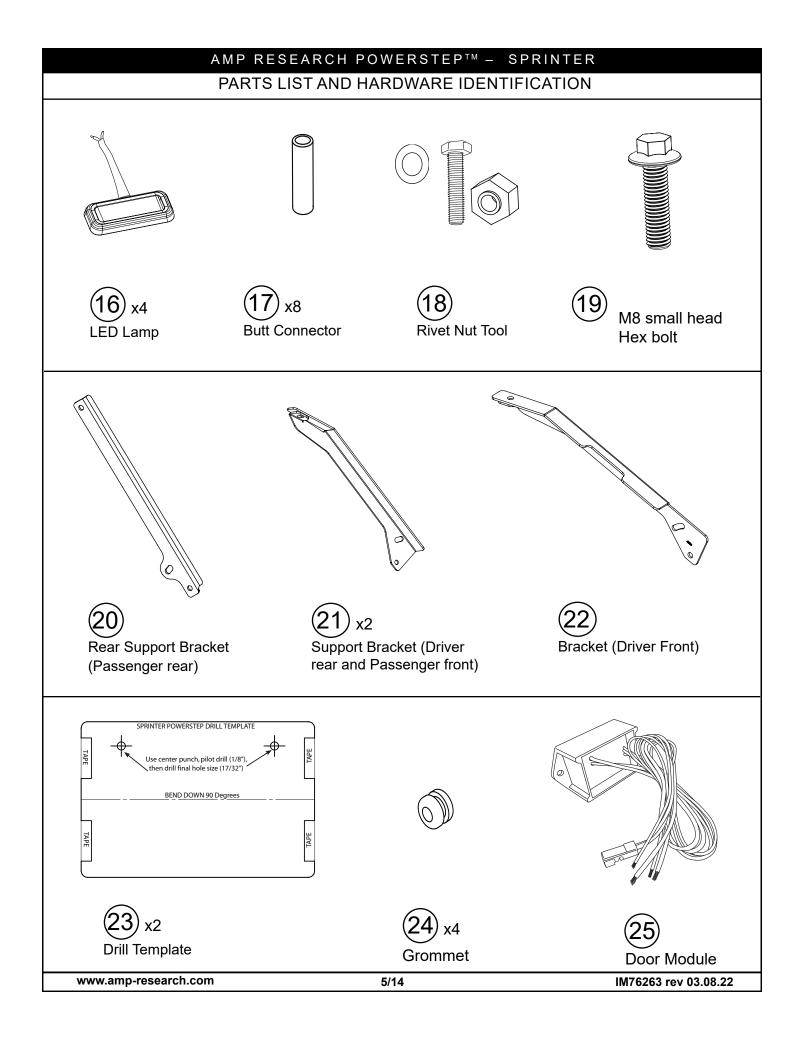


AMP RESEARCH POWERSTEP™ - SPRINTER

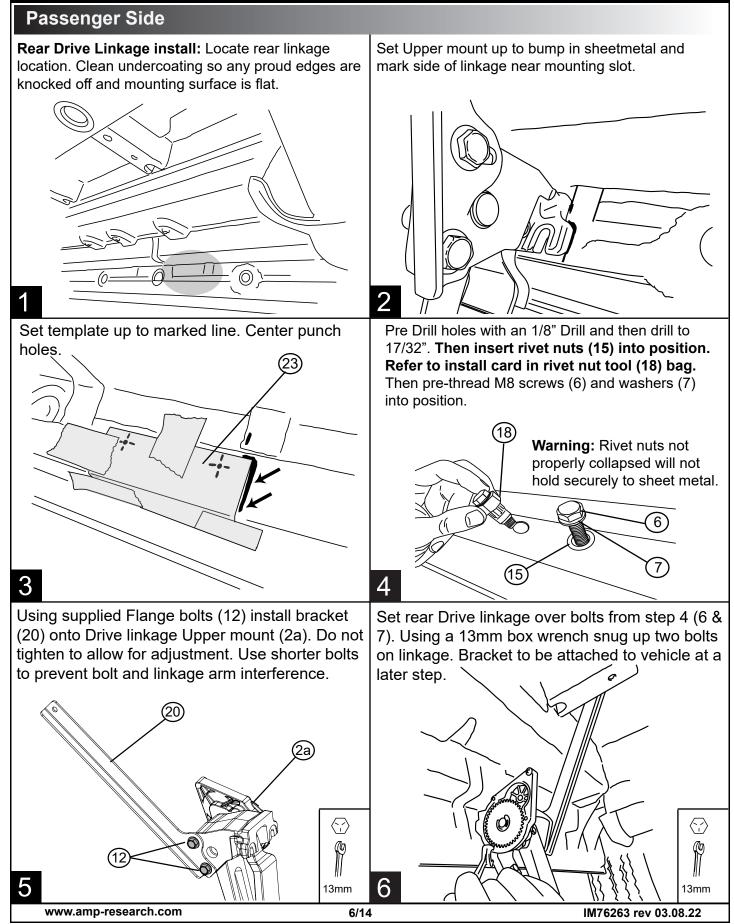


Front Idler Linkage Install: Locate front linkage mounting position. Location is approx 11" forward of tab in unibody crossmember as show. Tape template in place and center punch holes.

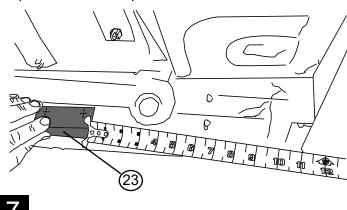


Using supplied Flange bolts (12) install bracket (21) onto Idler linkage Upper mount (3a). Do not tighten to allow for adjustment. Use shorter bolts to prevent bolt and linkage arm interference.

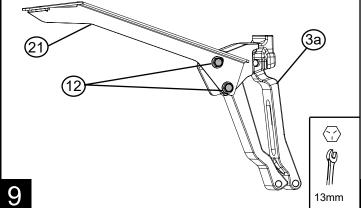

Pre Drill holes with an 1/8" Drill and then drill to 17/32". Then insert rivet nuts (15) into position. Refer to install card in rivet nut tool (18) bag. Then pre-thread M8 screws (6) and washers (7) into position.

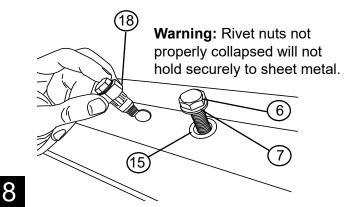


Set front idler linkage over bolts. Using a 13mm box wrench snug up two bolts from step 8 (6 & 7) on linkage. Once bracket are installed attach motor to rear linkage. See page 2 for motor installation.

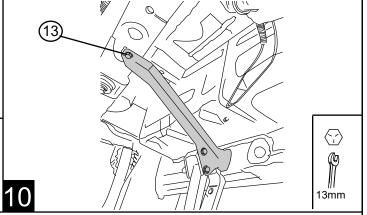


Driver Side

Locate Driver side front linkage location. Clean undercoating off so any proud edges are knocked off and mounting surface is flat. Front idler linkage location is approx. 10" Forward of unibody cross member. Tape template (23) in place and center punch holes.

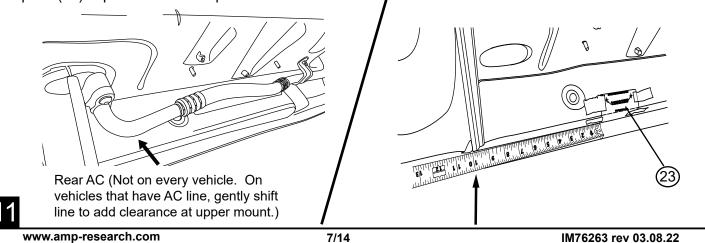


Pre Drill holes with an 1/8" Drill and then drill to Locate Driver side rear Drive linkage location. Clean 17/32". Then insert rivet nuts (15) into position. undercoating off so any proud edges are knocked Refer to install card in rivet nut tool (18) bag. off and mounting surface is flat. Rear drive linkage Then pre-thread M8 screws (6) and washers (7) location is approx. 2" Rearward of unibody cross into position. member. Tape template (23) in place and center punch holes. Drill and insert rivet nuts. Note: On forward mount hole use supplied small Warning: Rivet nuts not head hex bolt (19) for easier tool acess. properly collapsed will not hold securely to sheet metal. 6 12 Install running board onto lower mounts, measure 3" from end of board to side of linkage as shown below. Passenger side **Driver side**

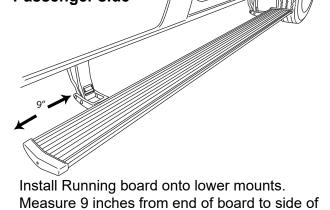


linkage as shown below.


Using light pressure pull out from the inside edge of the running board to get the step in the level position. Hold the running board in position. Mark upper hole location in rear brackets.

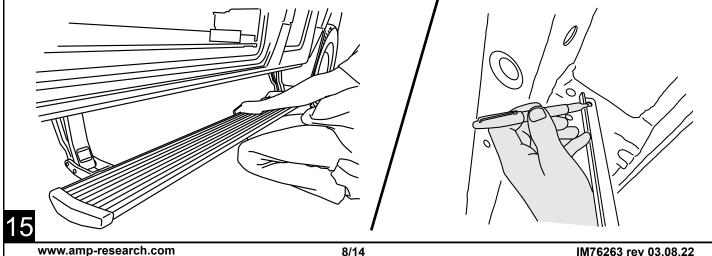


AMP RESEARCH POWERSTEP™ - SPRINTER

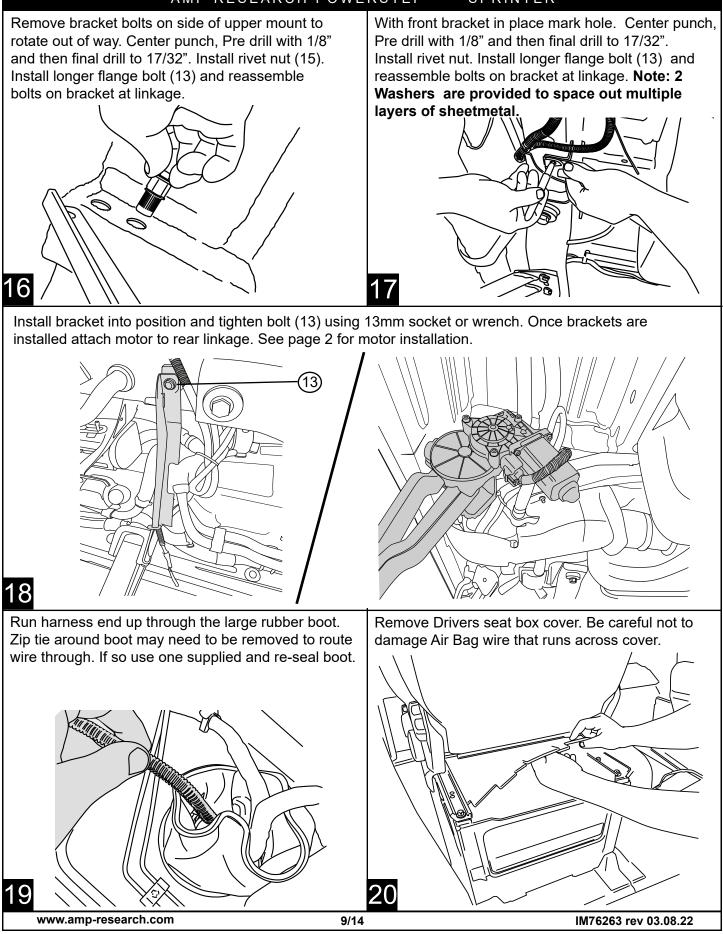

Remove Fuses. Connect positive terminal on power lead using a 10mm socket or wrench. Connect ground to body ground in bottom of seat box.

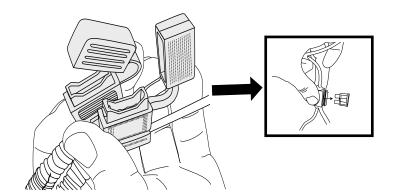


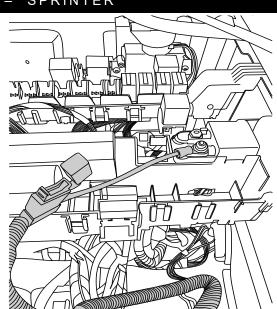


21

Mount controller under seat to wire loom. Use supplied zip ties to mount controller.


Route remaining wires up and over exhaust heat shield and back along each side to motors. Connect plug to motors.

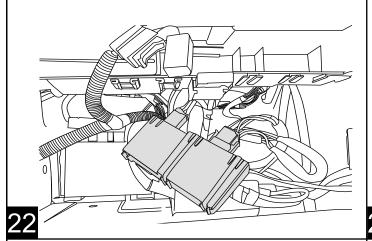


Route Trigger wires (Solid Purple and Purple / Black Stripe and module power wire) under seat and out under sill plate cover.

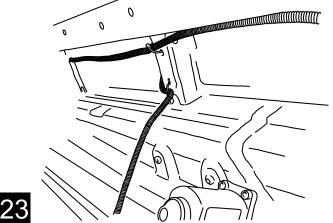

Route 3 wires up towards driver side kick panel.

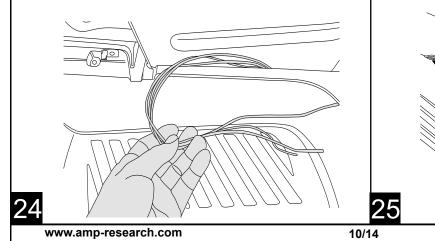


<image><image><section-header>

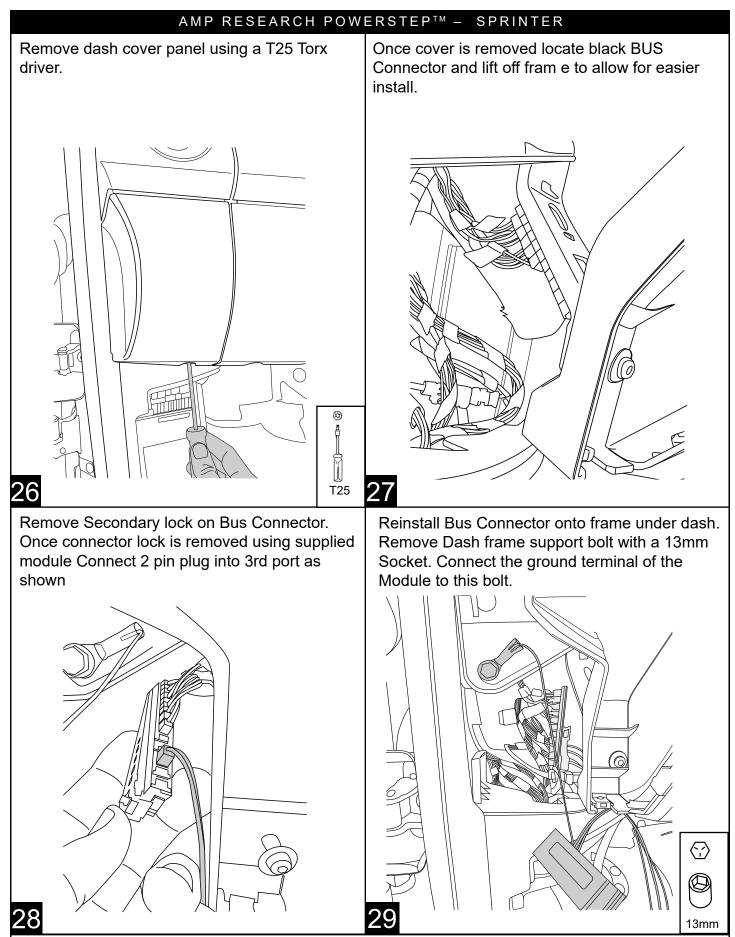


www.amp-research.com

IM76263 rev 03.08.22

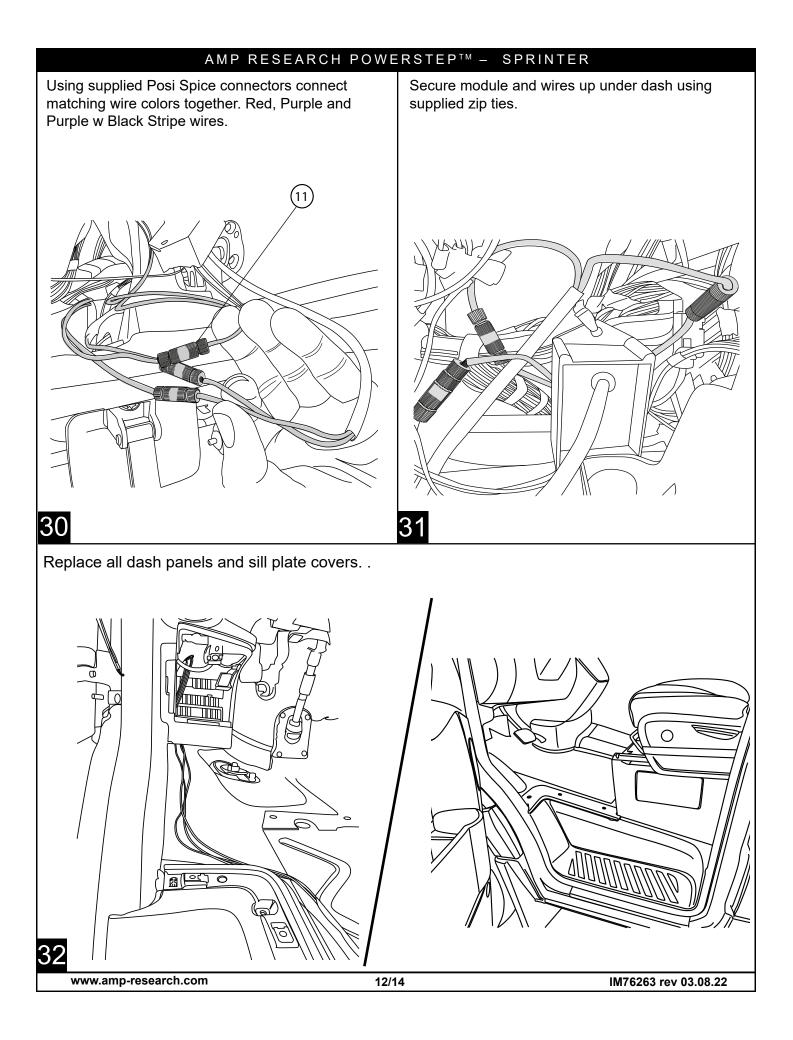


Some vehicles may have a shield shown. Verify Board does not come in contact with shield. If board contacts shield bend shield out of the way to prevent contact.

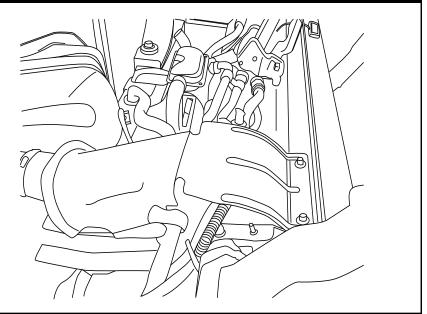


33

Measure from the front edge of door line on the pinch weld to the specified lengths below. Measure at 12" for the front LED Light and 60" for the rear LED Light.

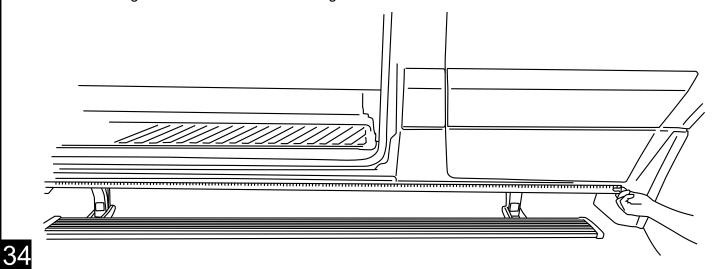

Drill a 9/32" hole through the pinch weld at marked locations. Debur all holes. Insert grommet into drilled holes. Insert lamp wires through the grommets. (Silicon lube will help wires slip through grommets.) Affix lamp to rocker panel surface. Make sure lamp is affixed to a flat, clean surface.

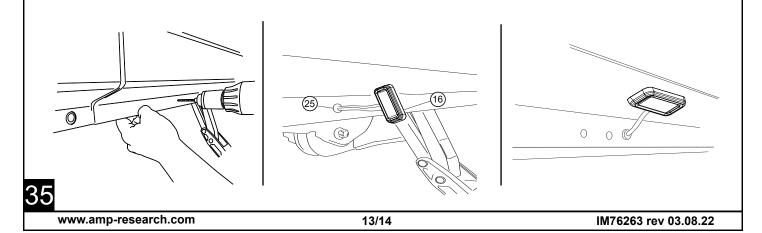

AMP RESEARCH POWERSTEP[™] - SPRINTER Using supplied butt connectors, connect the lamp Close and wrap with conduit and electrical tape. wires. Red to Red, Black to Black Secure all loose wires with cable ties, with lamp wires pulled upward to avoid any wire snagging. MUUUUUU 36 Check that all doors activate the Power Step and the LED Lights work when doors open and close. Reinstall any remaining trim panels. 98 4 Reinstall fuse. FINAL SYSTEM CHECK Check that all doors activate the PowerStep and the LED lights work when doors open and close. **NORMAL OPERATION:** When the doors open, PowerStep automatically deploys from under the vehicle. When the doors are closed, PowerStep will automatically return to the stowed/retracted position. Note that

there is a 2-second delay before the PowerStep returns to the stowed/retracted position.

CORRECT OPERATION OF LIGHTS: All four lamps will illuminate upon opening any door of vehicle. Lamps will stay on until restowing of both Power Steps or until 5 minutes has expired with the doors open. When the lights timeout after 5 minutes, they can be reillumintated by closing and opening any door of vehicle.

38



AMERICAN DESIGNED, ENGINEERED AND MANUFACTURED.

Thank you for your recent AMP Research Purchase.

REGISTER YOUR PRODUCT TODAY FOR FASTER SERVICE & PRODUCT UPDATES

Please visit:

www.amp-research.com/productregistration or scan the QR Code



Product Registration Benefits:

• Ensure we have your purchase receipt and product info in our system which is required for warranty

• Faster and easier access to customer service and tech support in the unlikely event you need warranty or product support

Registration helps us keep you up to date on product information and offers

To view other Amp Research products that may be offered for your vehicle. **Please visit: www.amp-research.com**

AMP POWEr Step

Congratulations on your purchase of the genuine AMP Research PowerStep! Here's what you should know...

POWER-DEPLOYABLE RUNNING BOARDS OPERATION: AMP Research PowerStep running boards automatically move when the doors are opened to assist entering and exiting the vehicle.



Automatic power deploy:

The running boards will extend down and out when the doors are opened.

Automatic power stow:

The running boards will return to the stowed position when the doors are closed. There will be a 2-second delay before the running boards move to the stowed position.

Automatic stop:

If an object is in the way of the moving running board, the running board will automatically stop. To reset, clear any obstruction, then simply open and close the door to resume normal operation.



Manually set in the deployed (OUT) position for access to the roof: The running boards can be manually set in the deployed position by firmly holding the step down with your foot while at the same time closing the door. To resume normal operation, open and close the door.



Maintenance: In adverse conditions, debris such as mud, dirt, and salt may become trapped in the running board mechanism, possibly leading to unwanted noise. If this occurs, manually set the running boards to the deployed position and flush the front and rear hinge arms with a high-pressure car wash wand. <u>Avoid spraying the motors directly.</u> After washing, apply silicone spray lubricant to the hinge pivot pins. Do not apply silicone, wax or protectants like Armor All[®] to the running board stepping surface.

Caution! Keep hands away when the running board is in motion.

5-YEAR LIMITED WARRANTY

AMP RESEARCH warrants this product to be free from defects in material and workmanship for FIVE (5) YEARS FROM DATE OF PURCHASE, provided there has been normal use and proper maintenance. This warranty applies to the original purchaser only. All remedies under this warranty are limited to the repair replacement of the product itself, or the repair or replacement of any component part thereof, found by the factory to be defective within the time period specified. The decision to repair or replace is wholly within the discretion of the manufacturer.

This warranty specifically excludes labor. If you have a warranty claim, first you must call our factory at the number below for instructions. You must retain proof of purchase and submit a copy with any items returned for warranty work. Upon completion of warranty work, if any, we will return the repaired or replaced item or items to you freight prepaid. Damage to our products caused by accidents, fire, vandalism, negligence, misinstallation, misuse, Acts of God, or by defective parts not manufactured by us, is not covered under this warranty.

ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE CREATED HEREBY ARE LIMITED IN DURATION TO THE SAME DURATION AND SCOPE AS THE EXPRESS WRITTEN WARRANTY. OUR COMPANY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGE.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

FOR WARRANTY ISSUES WITH THIS PRODUCT PLEASE CALL AMP RESEARCH TECH SUPPORT 1-888-983-2204

WARNING

Be sure to read and precisely follow the provided instructions when installing this product. Failure to do so could place the vehicle occupants in a potentially dangerous situation. After installing or reinstalling, re-check to insure that the product is properly installed.